

Checking connection


This page shows you how to identify when your Verofy® Move is connected to GPRS.

If your business doesn't have WiFi or you need to be able to take payments on the go, your Verofy® Move can connect to 4G/3G.

Your Verofy® Move should always be dispatched with the SIM already set up and ready to transact.


If your terminal is successfully connected to GPRS, you'll see the signal bars with a **4G** or **3G** to the left of the bars (as you see in the image below).

Image not found or type unknown

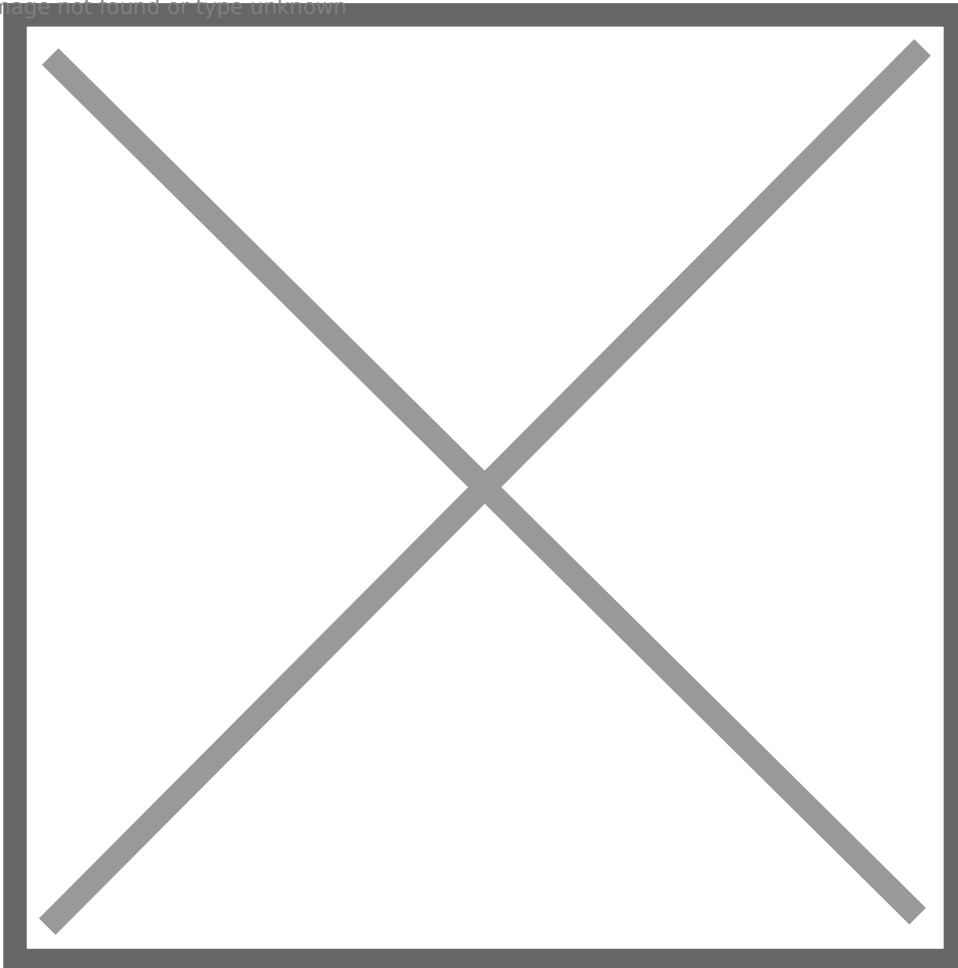

If there is no connection established, you'll still see the signal bars but instead of the 4G/3G, you'll just see the letter R in a white circle (as you see in the image below).

Image not found or type unknown

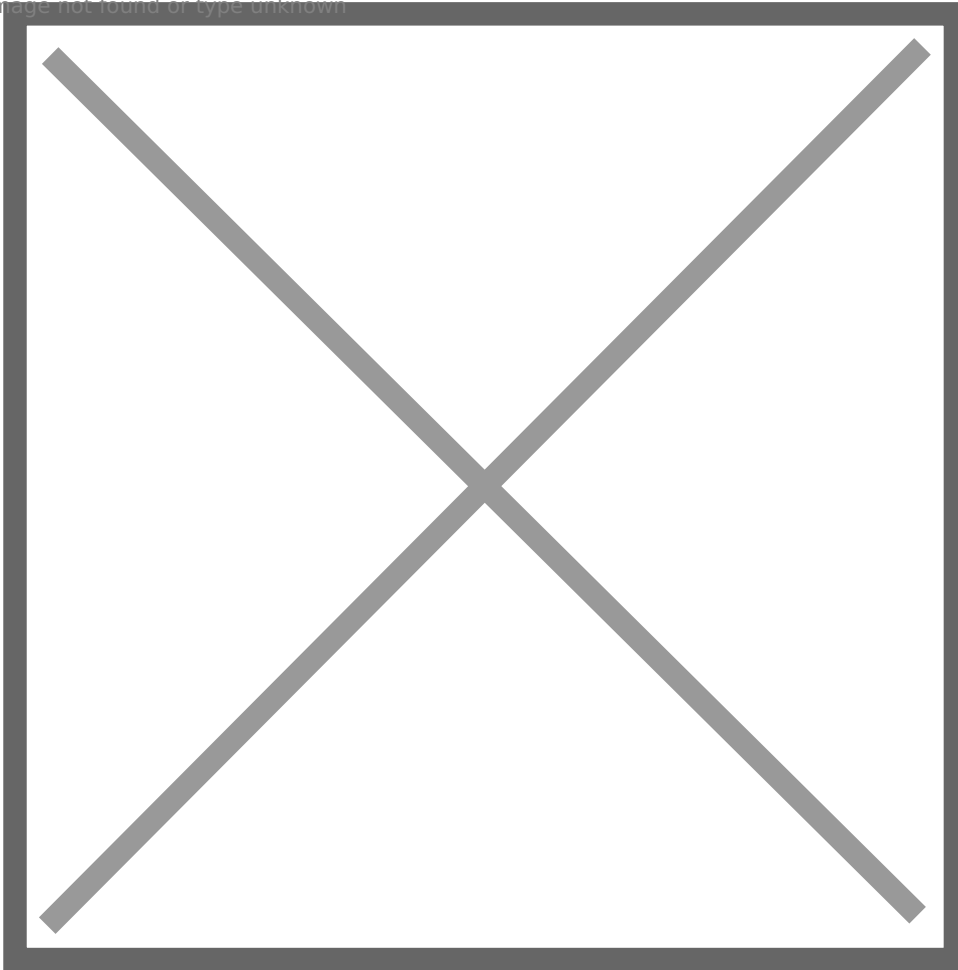

If you don't see either **4G** or **3G**, click [here](#) to learn how to check your GPRS settings.

It's as easy as that! You've checked if you are connected.

Revision #12

Created 27 April 2023 15:36:18 by Verofy® Support

Updated 3 November 2025 12:22:29 by Verofy® Support