


Removing/forgetting a saved network

This page talks you through removing a saved WiFi network from your Verofy® Move terminal.

1. Head to the **Settings** menu from the start up screen and find the WiFi Settings option.

Please note - the **WiFi Settings** option you'll need might be situated in a different place to the below guide if you've already logged into your Verofy® Move.

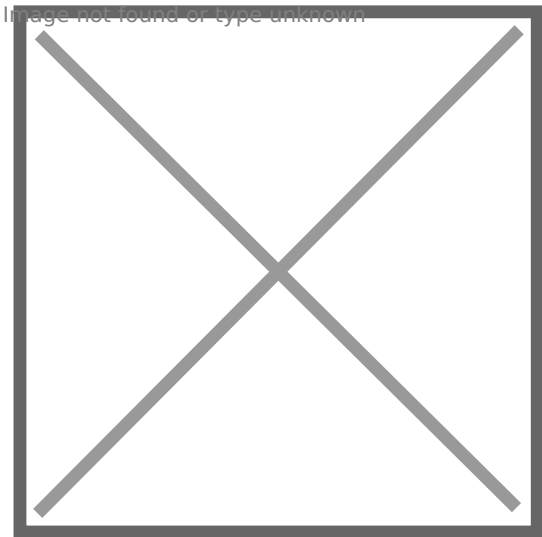

2. You'll see a list of available WiFi networks with the one you're currently connected to at the top.

image.png
Image not found or type unknown

3. Scroll to the bottom of the list/page and you'll see an option called **Saved networks**. Select this option.

image.png
Image not found or type unknown

4. You'll then see a list of the saved networks on the Verofy® Move terminal. Select the one you want to forget and you'll see this screen. Press 'FORGET' to forget the network.

image.png
Image not found or type unknown

5. Press the green arrow at the top left of the screen to return to the **Settings** menu.

That's it! You've successfully forgotten the saved network.

Revision #9

Created 28 April 2023 16:21:16 by Verofy® Support

Updated 3 November 2025 12:21:23 by Verofy® Support